

Suzuki DL1000 V-Strom

2014-



SUPPLEMENTARY MANUAL

for SH-U01

REMOVE THE SEAT.



UNPLUG THE ECU CONNECTOR.
(BLACK, CONNECTOR UNDER THE FUSE BOX)



SPLICE THE
SPEEDOHEALER RED WIRE TO
ORANGE WIRE OF REAR BRAKELIGHT
SWITCH CONNECTOR.
(TRANSPARENT, 2-POLE CONNECTOR AT RIGHT SIDE
NEAR BATTERY)



Suzuki DL1000 V-Strom

2014-




SPLICE THE SPEEDOHEALER BLACK WIRE TO THE BLACK/WHITE WIRE.
(PIN NUMBER 25)

CUT THE PINK/WHITE WIRE ABOUT 4CM (1.5") AWAY FROM THE CONNECTOR.
(PIN NUMBER 3)



SPLICE THE SPEEDOHEALER WHITE WIRE TO THE PINK/WHITE WIRE END, WHICH GOES TO THE ECU CONNECTOR.

SPLICE THE SPEEDOHEALER GREEN WIRE TO THE PINK/WHITE WIRE END, WHICH IS AT THE WIRING HARNESS SIDE.

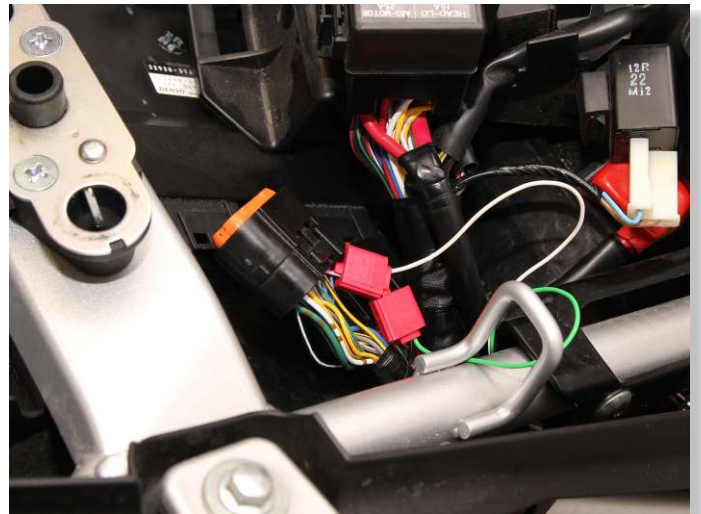

RECOMMENDED POSITION FOR SPEEDOHEALER.



Suzuki DL1000 V-Strom

2014-



TYPICAL POSITION
FOR TSM SWITCH.

